



---

## MODELS 82310 22" & 82312 26" 300 LB. CAPACITY WHEEL DOLLIES OPERATING INSTRUCTIONS

Note: Revision letters (A, B, C, D etc.) after model numbers have been omitted as they do not affect the setup, operating and maintenance instructions of a particular jack unless otherwise noted.

---

### IMPORTANT: READ THESE INSTRUCTIONS BEFORE OPERATING

**BEFORE USING THIS WHEEL DOLLY, READ THIS MANUAL COMPLETELY AND THOROUGHLY, UNDERSTAND THEIR OPERATING PROCEDURES, SAFETY WARNINGS AND MAINTENANCE REQUIREMENTS. FAILURE TO DO SO COULD CAUSE ACCIDENTS RESULTING IN SERIOUS OR FATAL PERSONAL INJURY AND/OR PROPERTY DAMAGE.**

The use of wheel dollies is subject to certain hazards that cannot be prevented by mechanical means, but only by the exercise of intelligence, care, and common sense. It is therefore essential to have owners and personnel involved in the use and operation of equipment who are careful, competent, trained, and qualified in the safe operation of the equipment and its proper use. Examples of hazards are dropping, tipping, or slipping of loads caused primarily by improperly securing loads, overloading, off-centered loads, use on other than a hard level surface, and using equipment for a purpose for which it was not designed.

It is the responsibility of the owner to make sure all personnel read these manuals prior to using this device. It is also the responsibility of the device owner to keep these manuals intact and in a convenient location for all to see and read. If the manuals are lost or not legible, contact Norco Industries, Inc. for free replacements. If the operator is not fluent in English, the product and safety instructions shall be read to and discussed with the operator in the operator's native language by the purchaser/owner or his designee, making sure that the operator comprehends its contents.

#### WARRANTY

This product is covered by a Limited Lifetime Warranty. For details see the back cover of Norco's product catalog.

---

### WARNING

- Inspect the wheel dolly before each use. Do not use the wheel dolly if it is damaged, altered, modified, in poor condition, or has loose or missing hardware or components. Take corrective action before using the wheel dolly.
- Do not exceed rated capacity. Use only on a hard level surface.
- Before moving the load, assure that the load is centered.
- Before moving, lower the load to the lowest possible point.
- No alterations or modifications shall be made to this product.

---

## OPERATING INSTRUCTIONS

1. Position tire in the center of the rollers located on either side of the dolly frame.
2. Lift up on handle and roll tire into position.
3. Rotate tire on rollers to align with lugs.

---

## REPAIR SERVICE

If your Norco product requires service or repair, contact the Norco Customer Service Department for the location of the nearest Norco Authorized Service Center.

Norco Industries, Inc.  
365 West Victoria St.  
Compton, CA 90220  
(310) 639-4000 • Fax: (310) 639-7411  
[www.norcoindustries.com](http://www.norcoindustries.com)

It will be necessary to provide the Norco Authorized Service Center with a copy of the bill of sale if requesting warranty repair. If the authorized service center determines your product is eligible for warranty repair, the repair will be made at no charge and returned freight prepaid. The cost of non-warrantable service, repair, and return freight is the customer's responsibility.

