



---

## 72508 • FUEL TANK SADDLE ADAPTER • INSTRUCTIONS

---

1. Prepare fuel tank for removal always following manufacturer's instructions. Drain fuel into a safe, grounded container.
2. Center the jack and fuel tank saddle adapter under the fuel tank.
3. Using the thumb screws, adjust the legs of the adapter to a width that will support the fuel tank and keep it steady. The tilt feature of the jack's head may also be used to stabilize the load.
4. Following the proper manufacturer's instructions, remove and lower the fuel tank onto the padded legs of the fuel tank saddle adapter. Keep the tank as level as possible while making sure it is centered on the adapter.
5. Attach both straps over the top of the fuel tank and tighten to hold firmly in place.
6. Do not attempt to move the jack without attaching both straps and lowering the jack to its fully lowered position.

